

Product Name: **Interactive Round Tile**

Product Code: **PLLE19/ PLLE20**

Specification

Size: PLLE19: 50 x 5cm PLLE20: 30 x 5cm
Weight: PLLE19: 8.2kg PLLE20: 3.5kg
Material: Top tempered glass. Base: Coated Stainless Steel
LED: PLLE20, 96pcs, 20W non – replaceable multi coloured LEDs
LED: PLLE19, 169pcs, 25W non – replaceable multi coloured LEDs
Please note: All weights and sizes are approximate

Contents:

1 x Tile
1 x Adaptor

WARNING!

- Contains sequences of flashing lights may affect individuals who are susceptible to photosensitive epilepsy or other photosensitivities.
- This product is not a toy, to be used under adult supervision only.

Safety Warnings:

- Before setting up the tile, ensure the product is not damaged. If any part of the product is damaged, do not attempt to use.
- Only use the adaptor supplied with this product and no other adaptor must be used.
- Ensure the cable is placed so that it is not a trip or strangulation hazard.
- Keep away from heat sources or naked flame
- Carry out regular checks to ensure item is not damaged and can still be used.
- Ensure tile is placed on steady and even surface.
- This product is for indoor use only and should not be used outdoors. Avoid use in damp or moist conditions.
- Do not jump vigorously onto the tile.
- When not in use, always unplug from the mains, and place the wire/adaptor so that it does not cause a trip or strangulation hazard.

Instructions

1. Connect the pin from the tile to the pin on the adaptor



PLEASE NOTE: The pin from the tile and adaptor can be connected in two ways, but only one of these will work. If you have connected everything correctly, but the tile does not turn on, try disconnecting the tile and adaptor, and re-connecting them the other way around.

2. Tighten the screw over the connection, ensuring that the connection link is secure.
3. Plug in the adaptor to the mains plug socket and switch on.
4. The tile is touch sensitive. With each touch the light colour will change.
5. Tile can also be mounted on a wall. This must only be done by an experienced person.

Cleaning

- Wipe surface with soft damp cloth.
- DO NOT submerge in water
- DO NOT use harsh cleaning detergents.



Disposal: The “Crossed Wheelie Bin” symbol on the product means that the product is classed as Electrical or Electronic equipment and should not be disposed with other household or commercial waste at the end of its useful life. The goods must be disposed of according to your local council guidelines.

Please keep these instructions as it contains important information.