


# 8 Bay Mobile Storage Trolley With Seat


Code: ERMST8

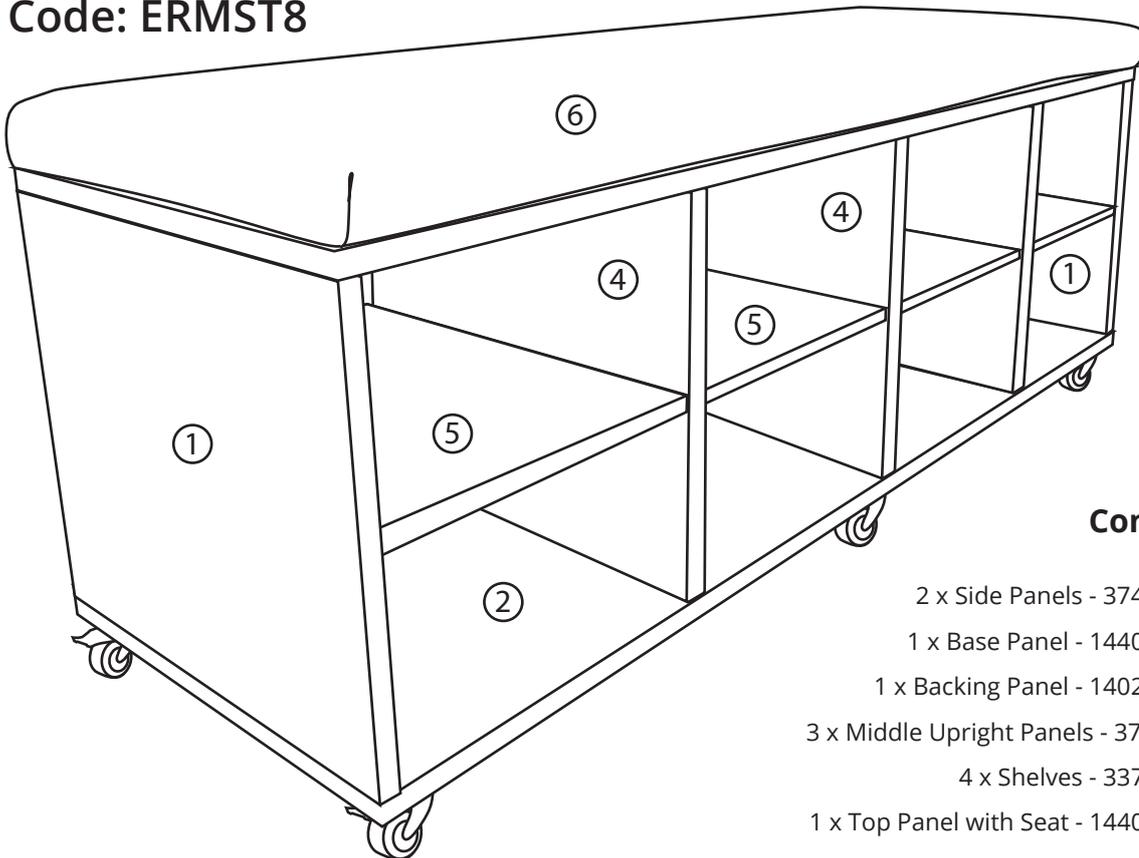

**Contents:**

- 2 x Side Panels - 374x452mm (1)
- 1 x Base Panel - 1440x455mm (2)
- 1 x Backing Panel - 1402x374mm (3)
- 3 x Middle Upright Panels - 374x432cm (4)
- 4 x Shelves - 337x431mm (5)
- 1 x Top Panel with Seat - 1440x455mm (6)


**Hardware (included):**

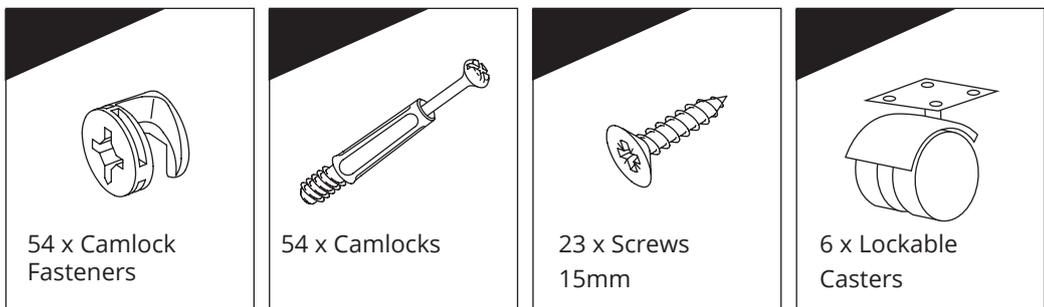

\*Package may contain extra parts

**You will need:**

Drill With a philips screw head

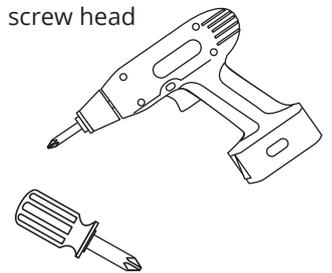

Short philips head screwdriver

**Elizabeth Richards School Supplies PTY LTD**


**Ph: 1300 137 064**

**E: sales@elizabethrichards.com.au**

**www.elizabethrichards.com.au**

## CamLocks

Camlocks create a very simple but strong joint. The Camlock Fastener drills into a pre-made plastic sleeve in the panel. The joining panel will have two holes: one for the Fastener to slide into and another for the Camlock to spin into and lock the tip of the Fastener. The more the Camlock is turned the tighter its grip on the Fastener.

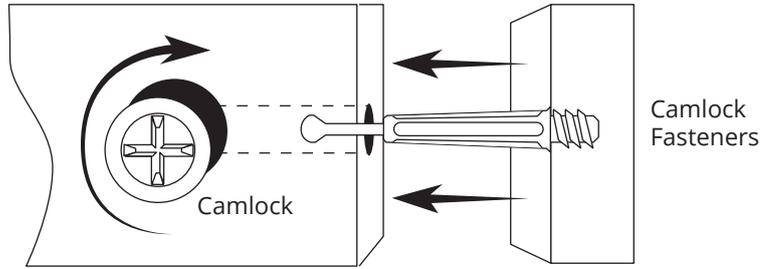







**TIP:**

Always place the Camlock with the cross on the outside. If the Fastener doesn't seem to be going in all the way, then the Camlock may need to be turned until it hooks the Fastener Tip.

**To start: Unpack contents and lay out on the floor. Identify all the parts and read through instructions to familiarize yourself with the construction process.**

### Step 1

Begin by screwing all of the Camlocks into the main pieces. Having all the Camlocks in will help in assembly - making sure everything is in the right position before you use the Camlock Fasteners.

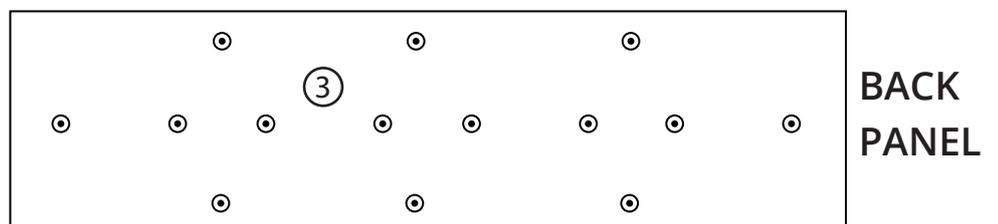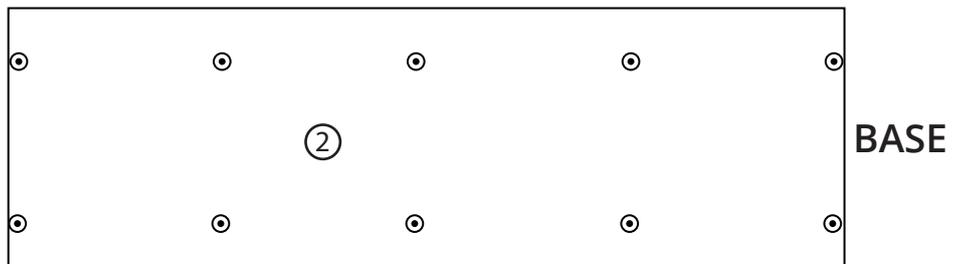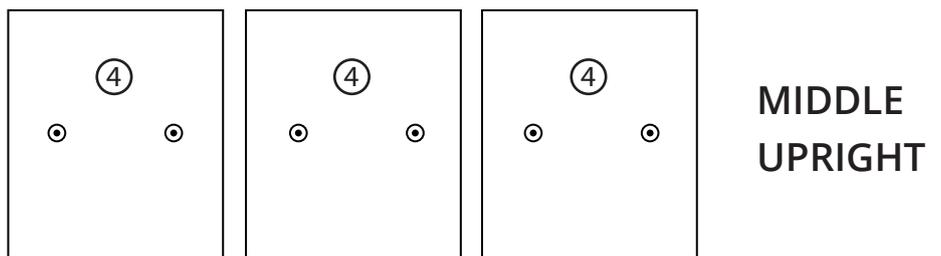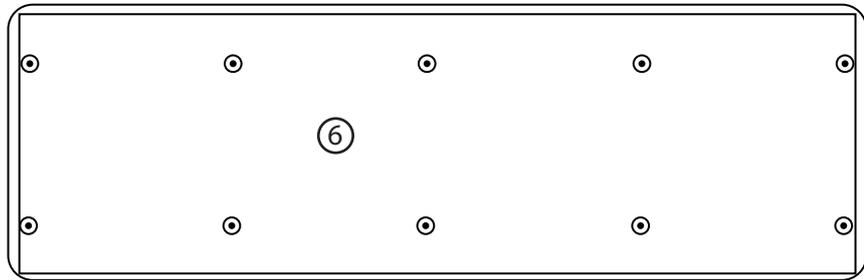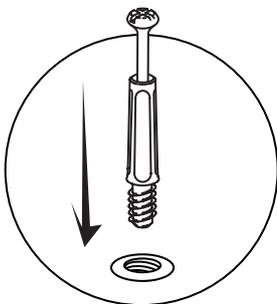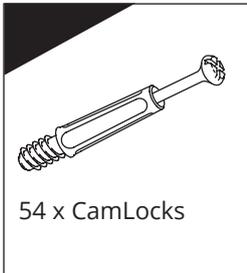


## Step 2

Lay the Back Panel (3) on the floor with the Camlocks upright. Carefully assemble the Upright Panels (4) and the Shelves (5) onto the Back Panel, starting at one end and adding the next piece to the last. Once all panels are in place, secure with the Camlock Fasteners.




**TIP:**  
Each placed panel may need to be lifted slightly to allow the next panel to fit onto all Camlocks.

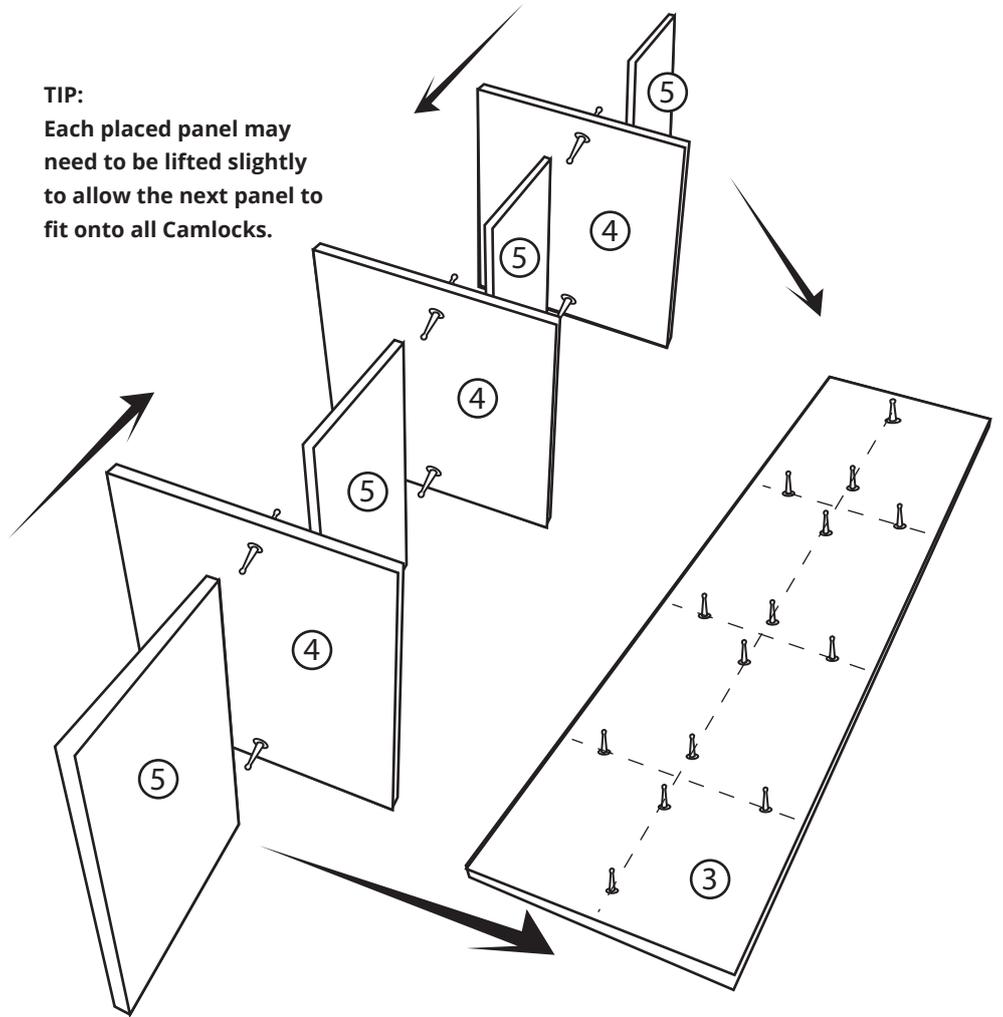



## Step 3

Attach the Side Panels (1) to each side of the unit, making sure the Camlocks also slide into the back panel. Lock in place with the CamLock Fasteners.

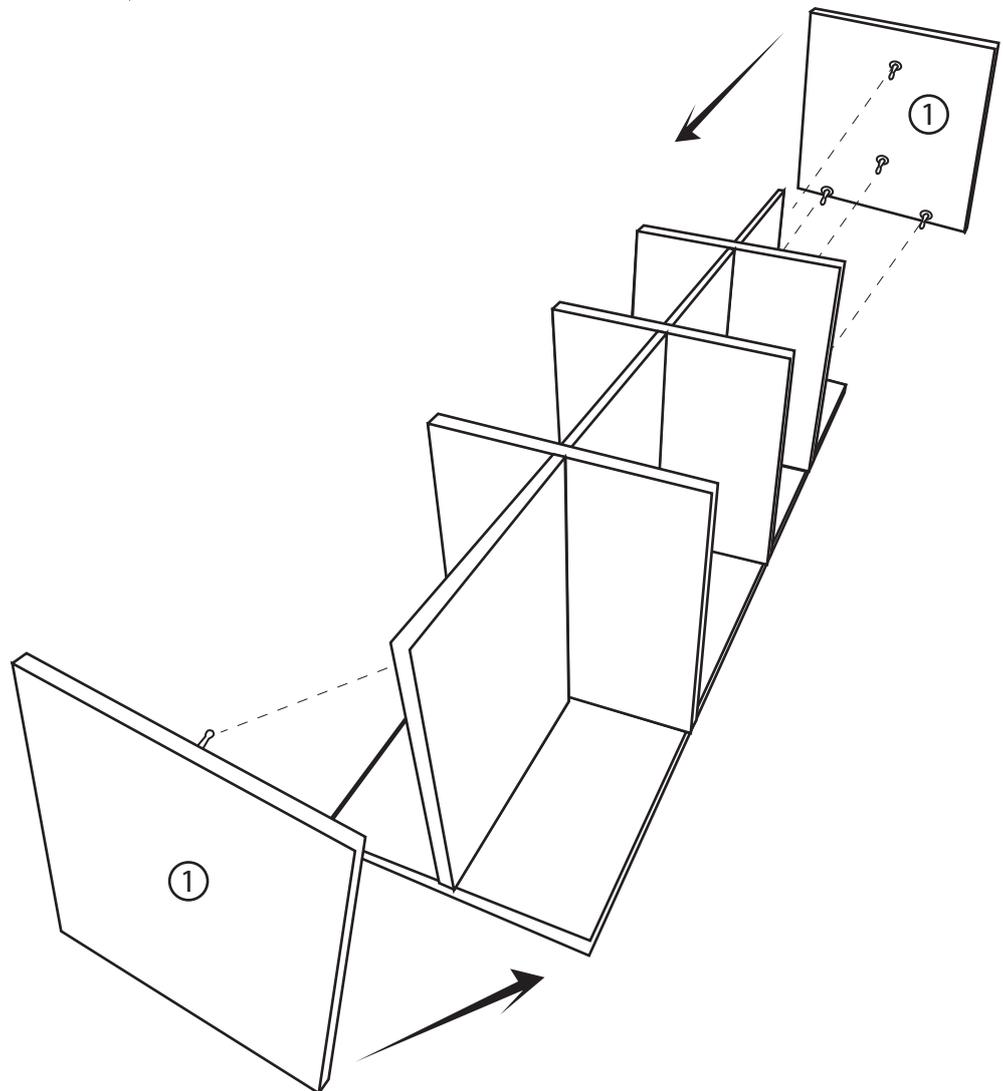


## Step 4

Connect the Base Panel (2) onto the unit and secure with Camlock Fasteners. Connect the Top Panel with the seat (6) onto the unit and secure with Camlock Fasteners.

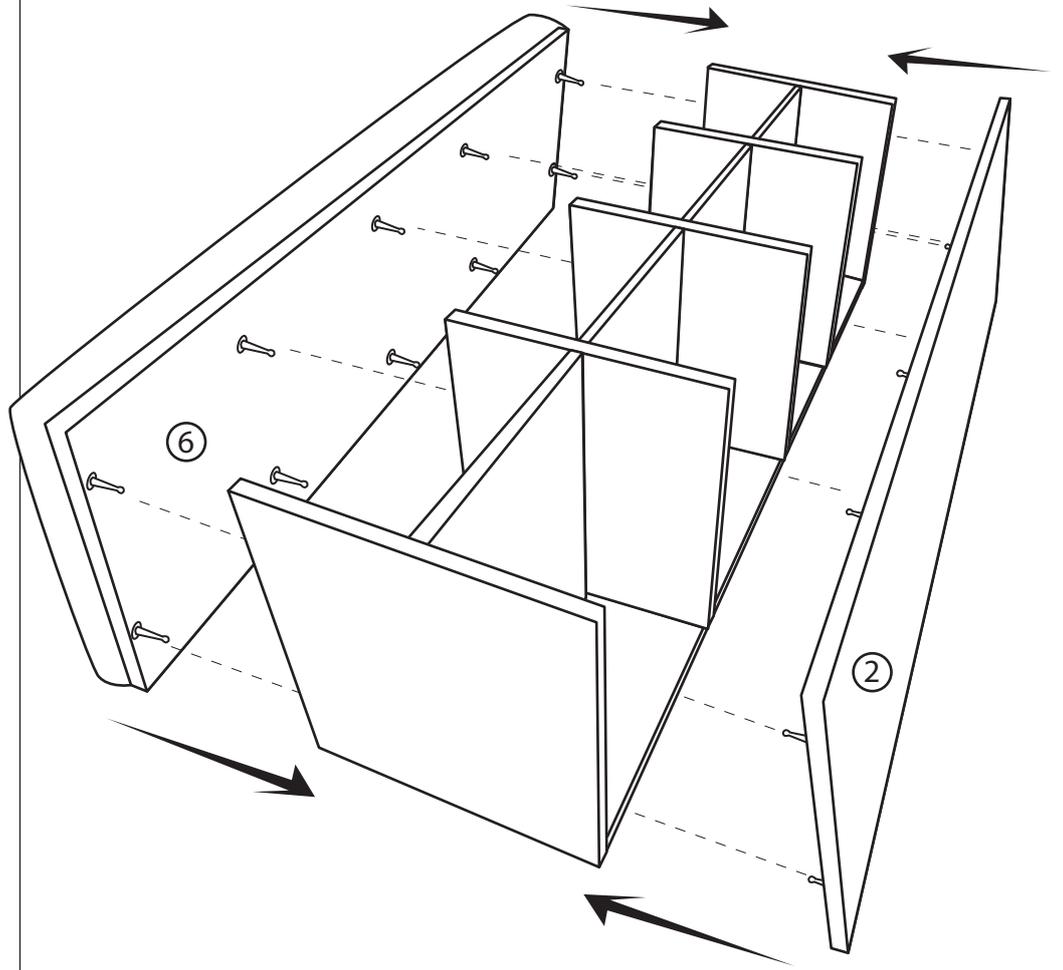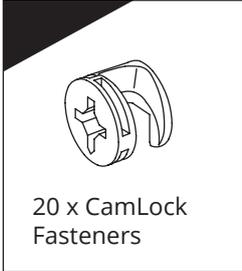

## Step 5

Screw in the Casters to each corner and centre of the base, allowing for about a 1cm of space to each edge. Then turn unit upright.

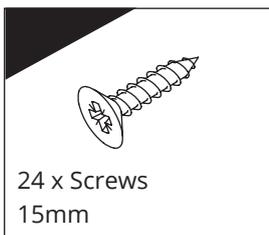

**TIP:**  
Lock the casters before you turn the unit upright so as to avoid the unit rolling as you lift it.

