


Triple Tote Tray Trolley Frame - Tote Trays Optional

Code: ERTTF

Contents:


- 2 x Top Rails (With Wooden Trolley Top brackets) ①
- 2 x Bottom Rails ②
- 2 x End Frames ③
- 4 x Mid Frame uprights ④
- 1 x Wooden Trolley Top ⑤
- 30 x Tray Rails

**Tote Trays
sold separately**


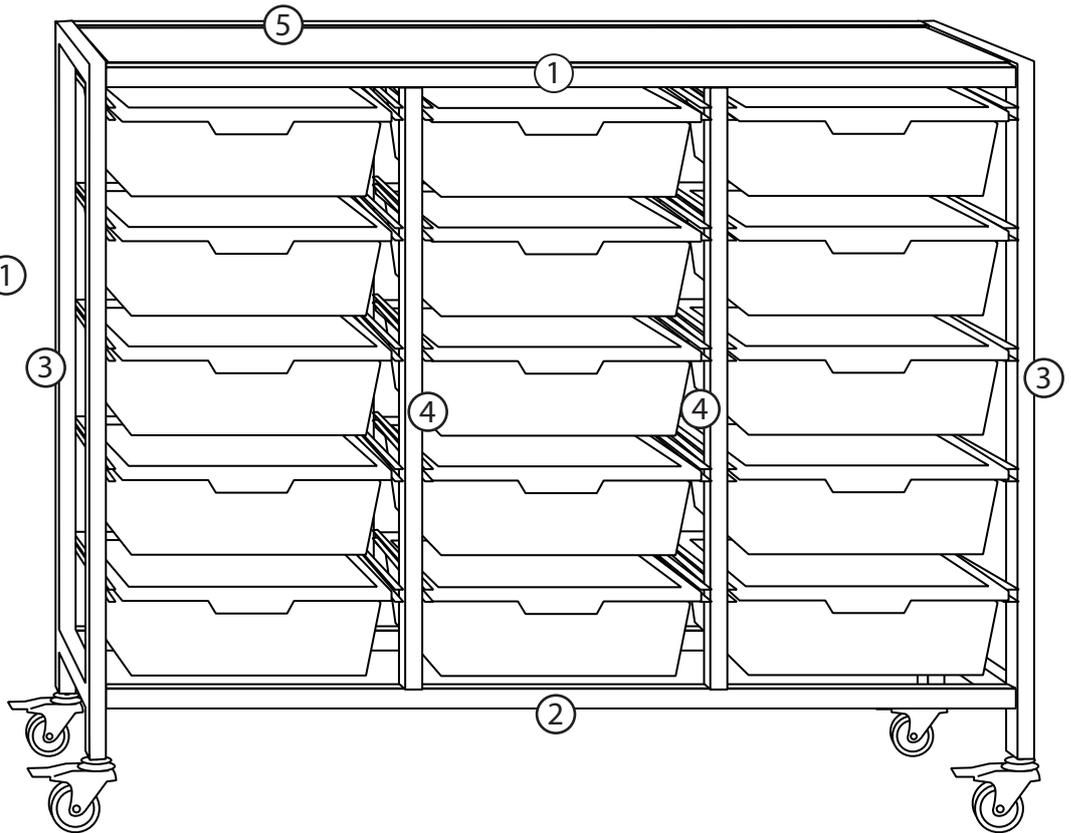


You will need:

Allen Key (supplied)

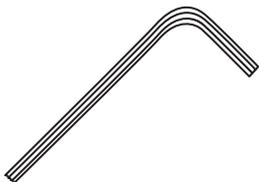

Hardware:

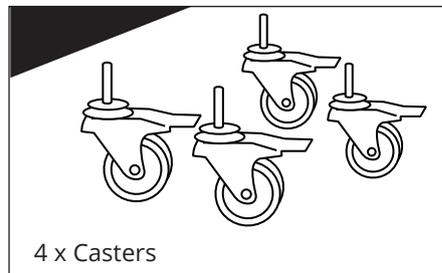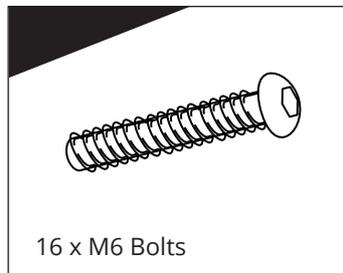

Elizabeth Richards School Supplies PTY LTD

Ph: 1300 137 064

E: sales@elizabethrichards.com.au


www.elizabethrichards.com.au

To start: Unpack contents and lay out on the floor. Identify all the parts and read through instructions to familiarize yourself with the construction process.

Step 1

Identify the Top ① and Bottom Rails ② (the top rails have tabs to hold the wooden top in place). Screw the two end Frames ③ into all four rails using 8 bolts.


NOTE: Do not fully tighten bolts at this stage.

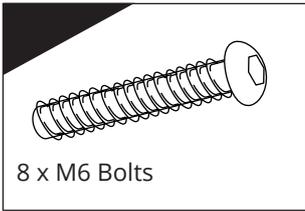

Step 2

Attach the 4 Mid Frame Uprights ④ using 8 bolts.

NOTE: Make sure the rail holes are facing side to side.

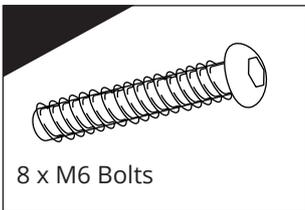

Step 3

Screw the 4 castors to the end frames and place the wooden top into the frame.

NOTE: Now fully tighten all bolts.

Attach the rails to the rail holes in the frame to hold your combination of Tote Trays.

